


双面印刷, 之字形折叠, 112*112mm




安装说明
Assassin King 90系列

www.thermalright.com


配件清单

A 散热片 x1	B 风扇 x1	C LGA115X/1700背板 x1
D INTEL支架 x2	E AMD支架 x2	F 风扇扣 x4
G 1200胶柱 x4	H LGA20XX螺丝 x4	I 螺帽 x4
J AM4螺丝 x4	K 导热膏 x1	L 降噪脚垫x4
M 螺柱 x4	N 塑胶垫 x4	O 1700胶柱 x4
P AM4胶柱 x4		

AMD AM4

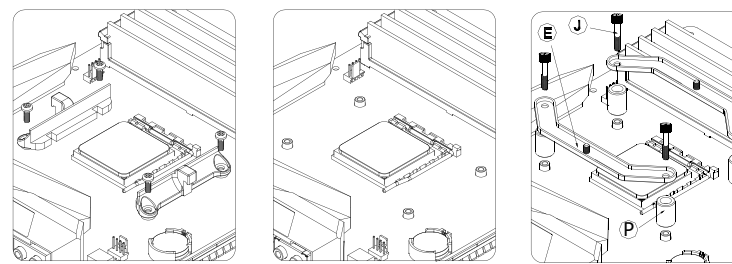


移除AMD原装塑胶支架, 保留背板; 使用AM4螺丝将AMD支架固定到背板

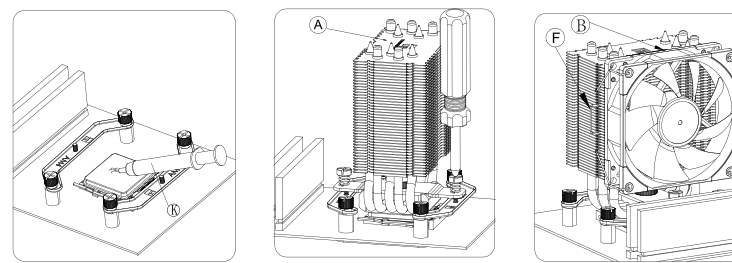


涂好导热膏, 然后用螺丝刀锁好主体, 再用风扇线扣固定风扇

INTEL LGA115X/1200

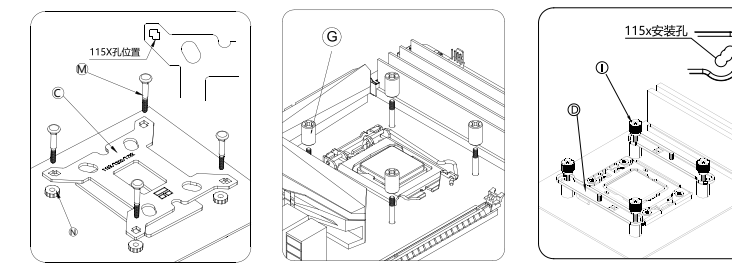


将螺丝对应LGA115X孔位穿过背板上塑胶垫放置在主板背面, 然后从正面放置胶柱, 支架再用螺帽固定住INTEL支架。

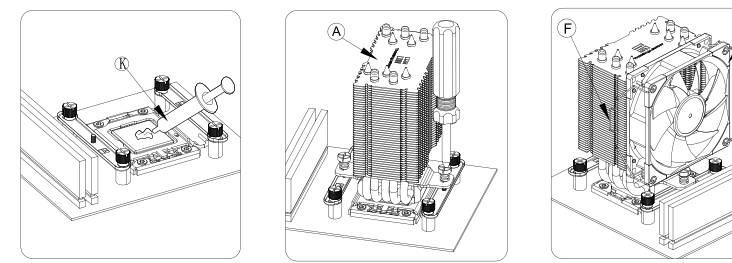


涂好导热膏, 然后用螺丝刀锁好主体, 再用风扇线扣固定风扇

INTEL LGA20XX

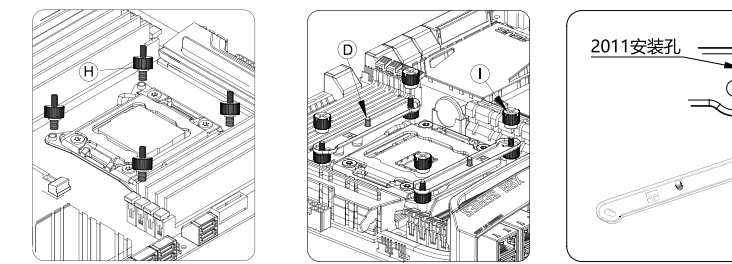


将LGA20XX螺柱拧到主板, 然后放置支架, 再用螺帽固定住INTEL支架。

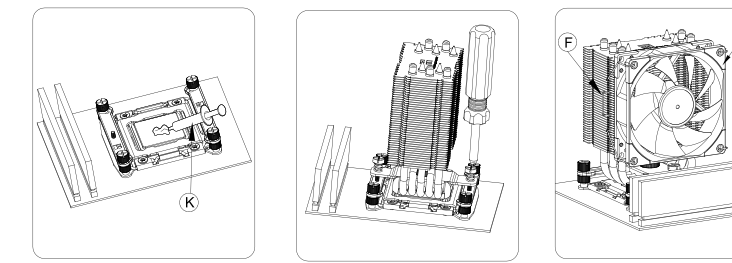


涂好导热膏, 然后用螺丝刀锁好主体, 再用风扇线扣固定风扇

INTEL LGA1700

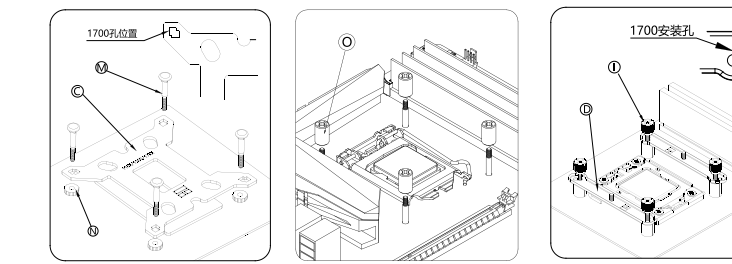


将螺丝对应LGA1700孔位穿过背板上塑胶垫放置在主板背面, 然后从正面放置胶柱, 支架再用螺帽固定住INTEL支架。

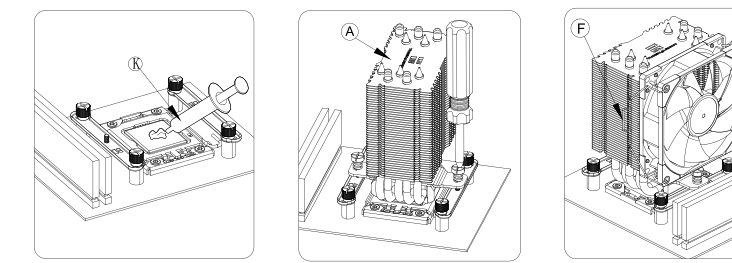


涂好导热膏, 然后用螺丝刀锁好主体, 再用风扇线扣固定风扇

风扇安装

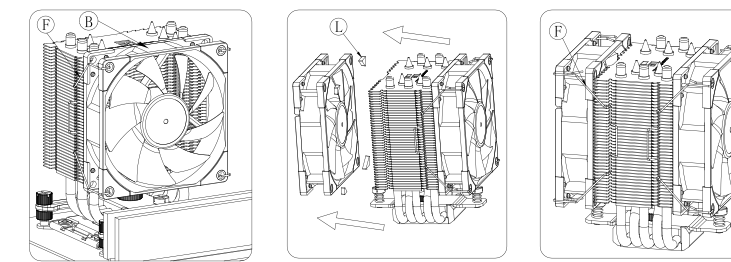

使用线扣将风扇安装到散热器上, 如果使用双风扇时, 降噪脚垫贴在散热器出风面


风扇接线

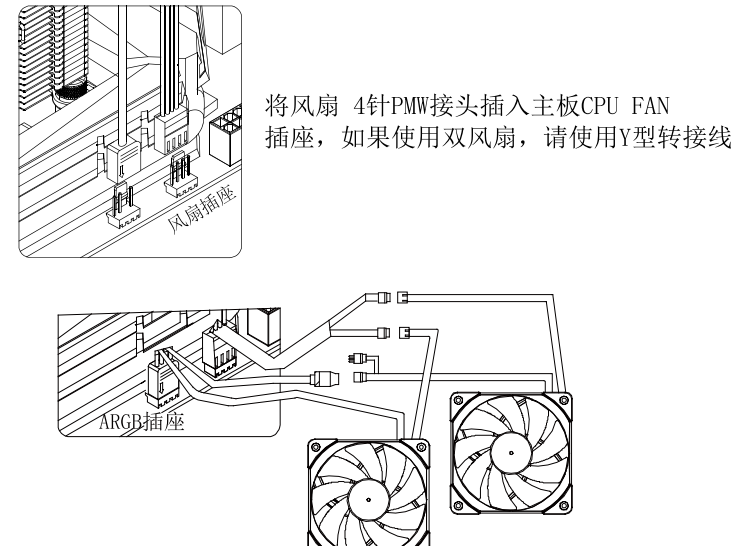

将风扇 4针PWM接头插入主板CPU FAN 插座, 如果使用双风扇, 请使用Y型转接线。

如果风扇有ARGB灯效, 请将ARGB 3针 (5V) 插入主板对应 ARGB灯效插座或者控制器, 多风扇之间可串联同步。

双面印刷, 之字形折叠, 112*112mm




INSTALLATION GUIDE
Assassin King 90 Series

www.thermalright.com


parts list

A Heatsink x1	B Fan x1	C LGA115X/1700 Backplate x1
D INTEL Bracket x2	E AMD Bracket x2	F Fan Clip x4
G 1200 Standoff x4	H LGA20XX Screw x4	I Tightening Nut x4
J AM4 Screw x4	K Thermal Grease x1	L Acoustic Rubber Pad x4
M Screw x4	N Plastic Washer x4	O 1700 Standoff x4
P AM4 Standoff x4		

AMD AM4

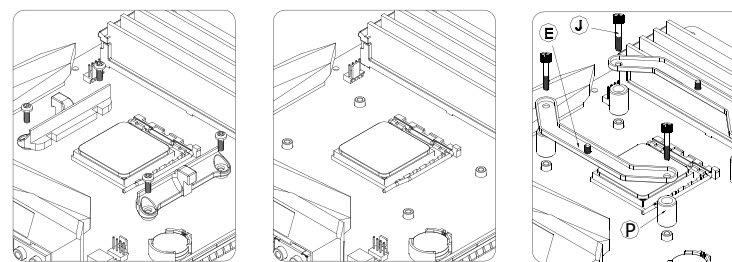


REMOVE AMD AM4 plastic brackets, KEEP the back plate, install AM4 metal brackets with AM4 screws and AM4 plastic standoffs

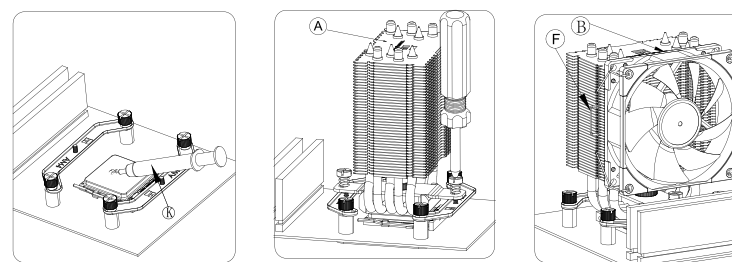


Apply thermal grease on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips

INTEL LGA115X/1200

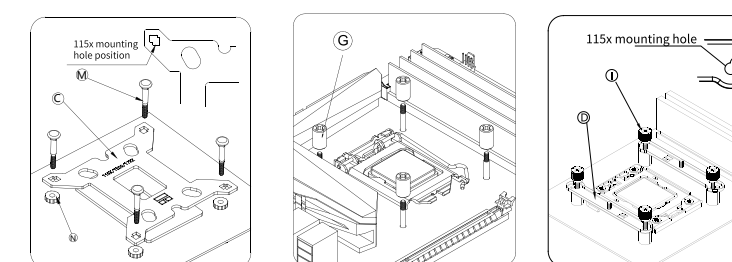


Install the INTEL back plate from the back of motherboard, then place plastic standoffs from front side of motherboard, install INTEL metal brackets with screws

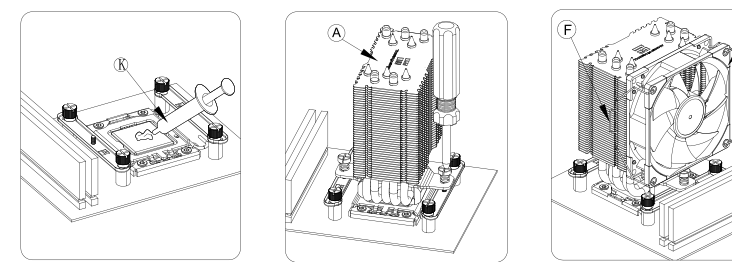


Apply thermal grease on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips

INTEL LGA20XX

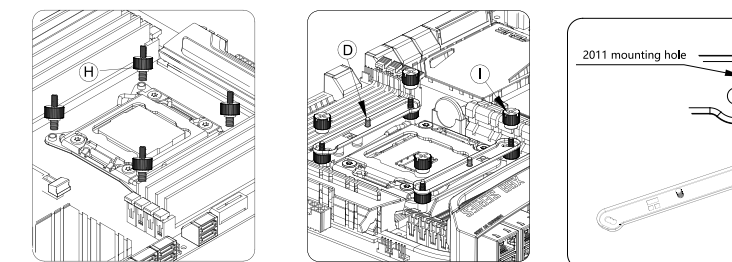


Install LGA20XX screws into motherboard socket mounting holes, then secure INTEL brackets with nuts.

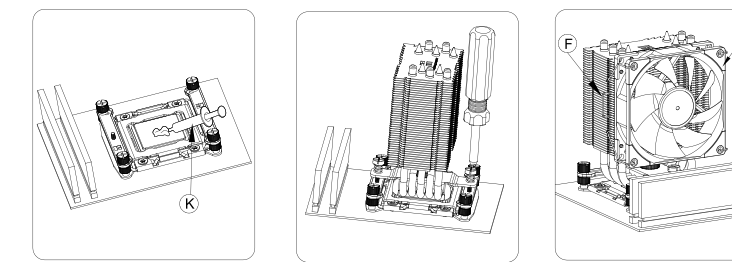


Apply thermal grease on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips

INTEL LGA1700

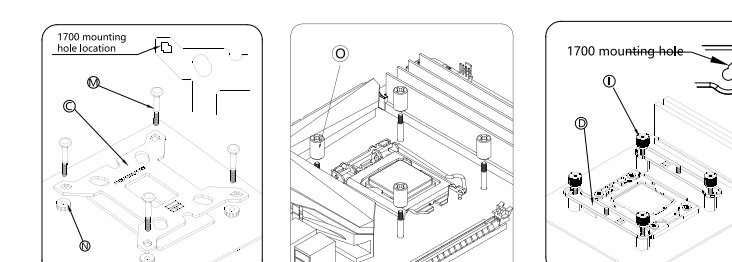


Install the LGA1700 back plate from the back of motherboard, then place plastic standoffs from front side of motherboard, install LGA1700 metal brackets with screws

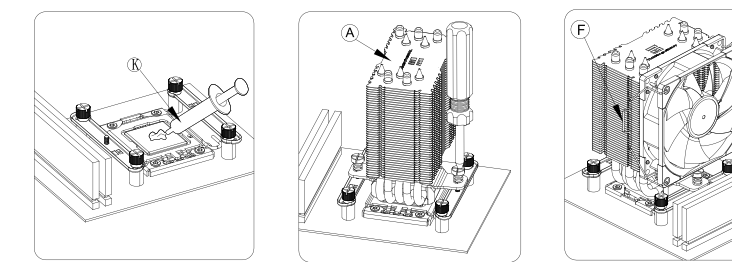


Apply thermal grease on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips

Fan Installation

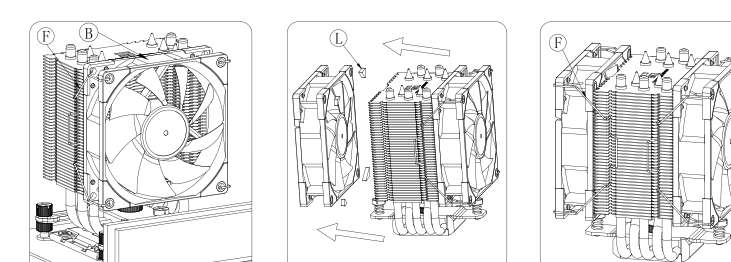

Install fan with fan clip.
For dual fan setup, stick acoustic rubber pad at fan exhaust side of heatsink.

Fan Wiring

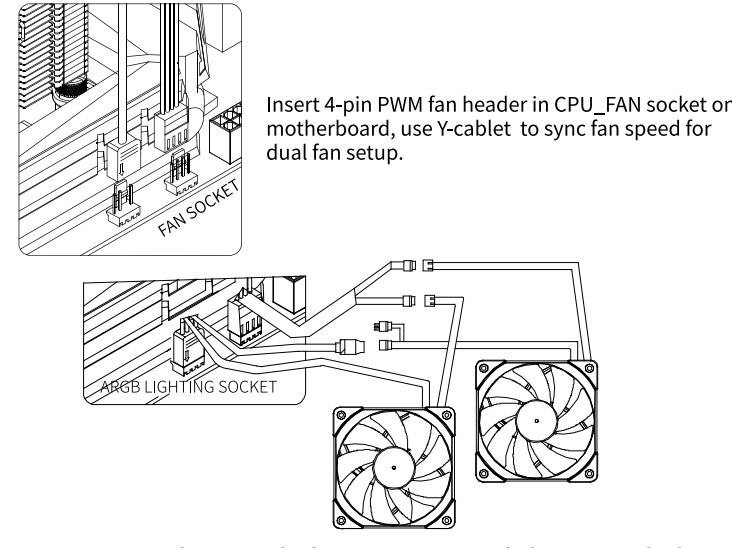

Insert 4-pin PWM fan header in CPU_FAN socket on motherboard, use Y-cable to sync fan speed for dual fan setup.

For Fans with ARGB lighting, To control the ARGB lighting, connect ARGB lighting header (3-pin +5V) to motherboard ARGB lighting socket or ARGB lighting controller, lighting effects can be sync by connecting fan lighting headers with each other