






Intel LGA 115x/1200/1700 Platform

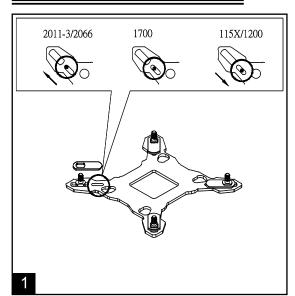


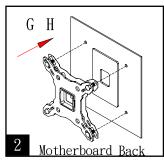


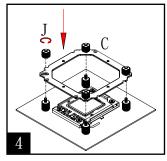


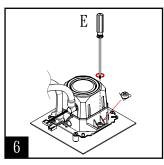


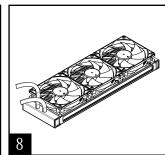

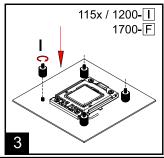


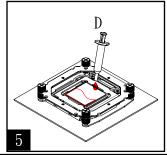


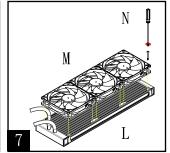


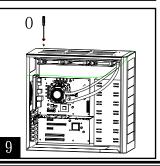



Intel LGA 2011/2011-3/2066 Plat form

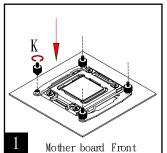

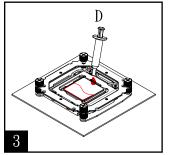


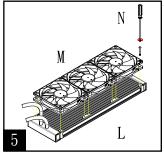


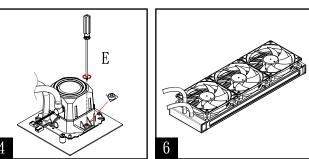


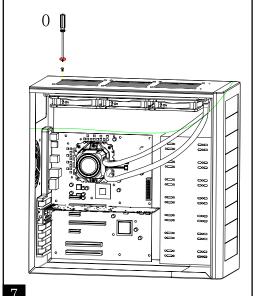


4 Steps to refill the TR coolant

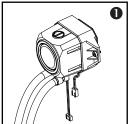

 


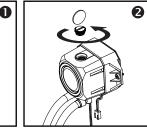

Tear off the warranty sticker and loosen the refill cap carefully with a coin or screwdriver.

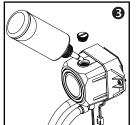

Refill the coolant with enclosed TR coolant kit. Be careful to keep from the coolant spilling out.

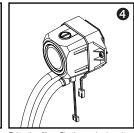

Tighten the refill cap, Plug the pump header and turn the power to make sure the pump operates normally. Install your water block back.