


双面印刷 Z字形折叠 112*112mm





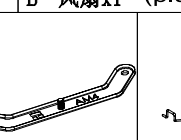
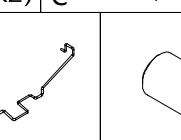
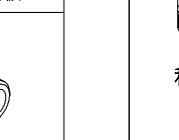

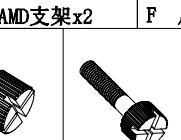
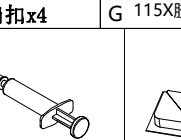
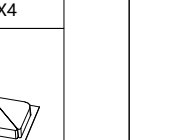
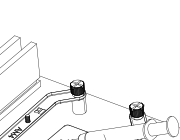

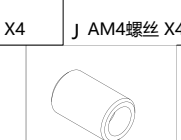
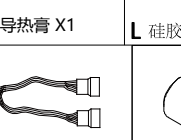
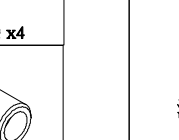



安装说明


Assassin spirit 120
系列

www.thermalright.com

配件清单

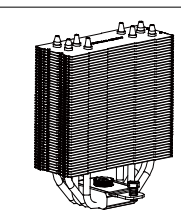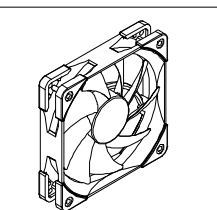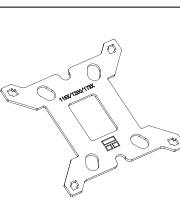
AMD AM4

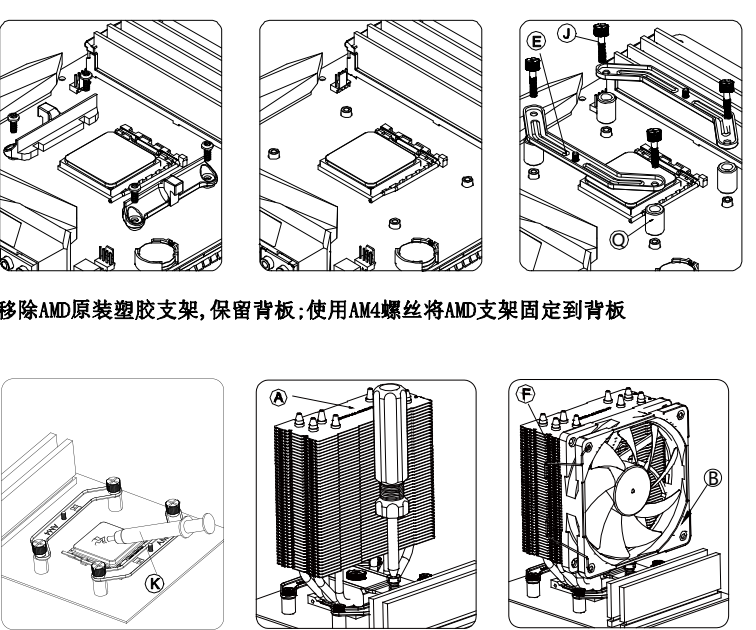

移除AMD原装塑胶支架,保留背板.使用AM4螺丝将AMD支架固定到背板

涂好导热膏,然后先锁好散热器,再固定风扇


INTEL LGA115X/1200

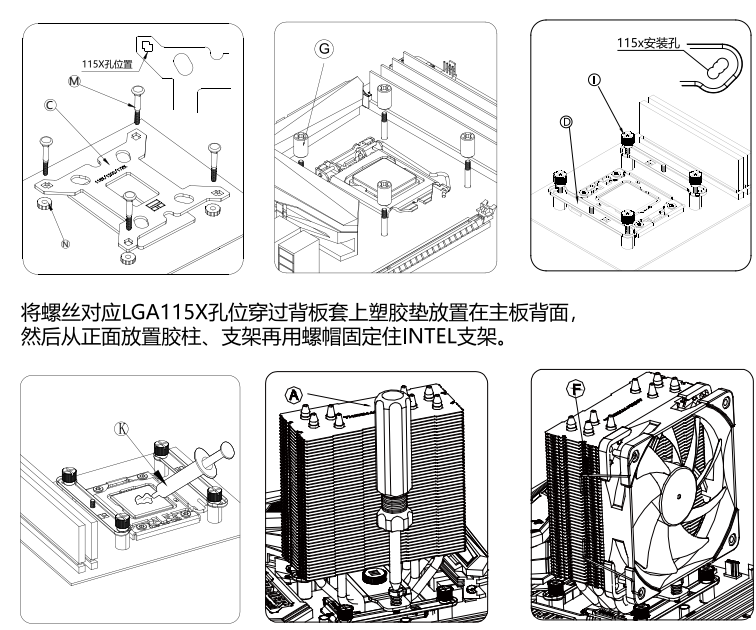

将螺丝对应LGA115X孔位穿过背板上塑胶垫放置在主板背面,然后从正面放置胶柱.支架再用螺帽固定住INTEL支架.

涂好导热膏,然后先锁好散热器,再固定风扇


INTEL LGA20XX

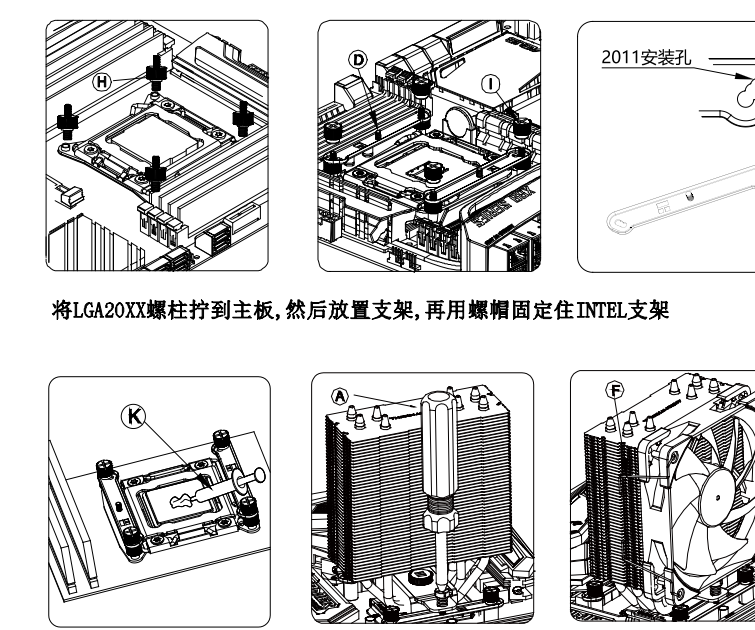

将LGA20XX螺母拧到主板,然后放置支架,再用螺帽固定住INTEL支架

涂好导热膏,然后先锁好散热器,再固定风扇


INTEL LGA1700

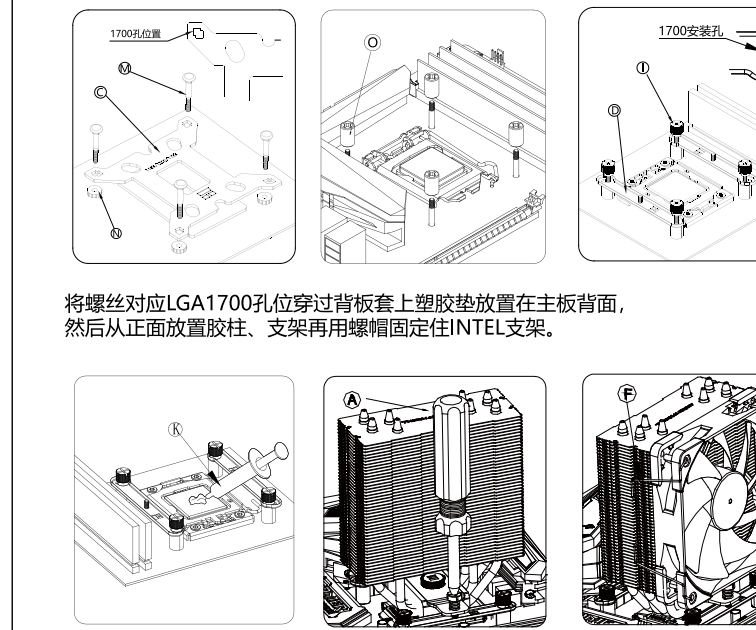

将螺丝对应LGA1700孔位穿过背板上塑胶垫放置在主板背面,然后从正面放置胶柱.支架再用螺帽固定住INTEL支架.


涂好导热膏,然后先锁好散热器,再固定风扇

风扇接线

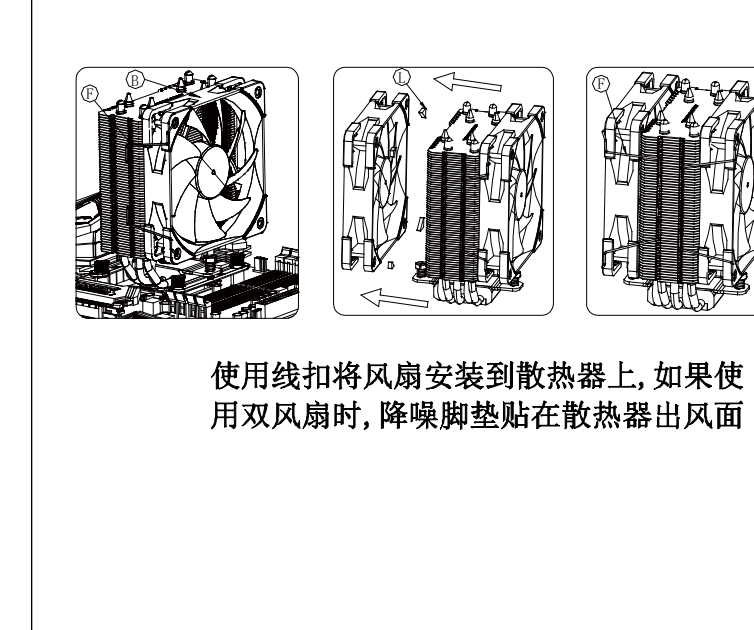


使用线扣将风扇安装到散热器上,如果使用双风扇时,降噪脚垫贴在散热器出风面

风扇接线

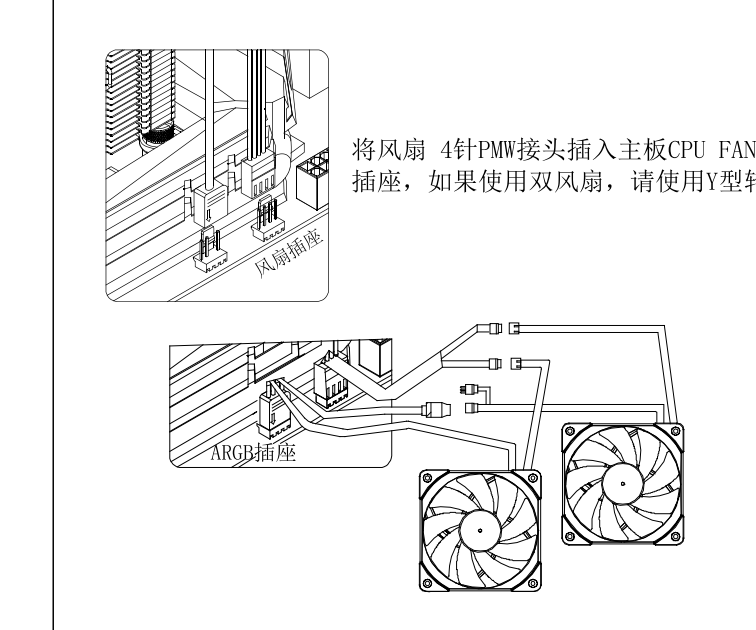

将风扇 4针PWM接头插入主板CPU FAN 插座,如果使用双风扇,请使用Y型转接线.

如果风扇有ARGB灯效,请将ARGB 3针 (+5V) 插入主板对应 ARGB灯效插座或者控制器,多风扇之间可串联同步.





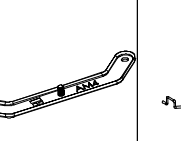
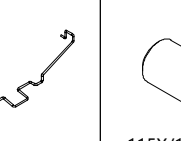
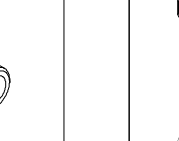
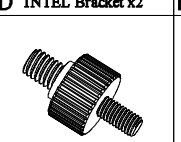
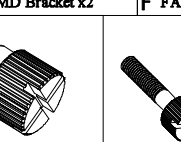
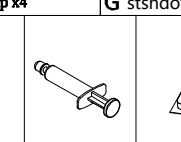
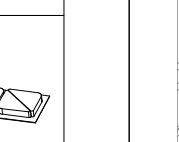
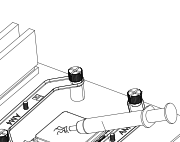
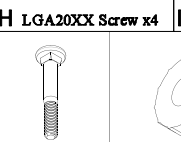
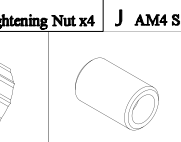
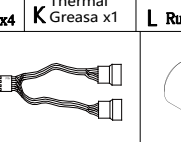
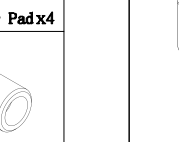
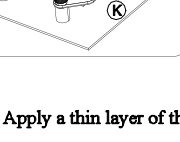


INSTALLATION GUIDE


Assassin spirit 120
Series

www.thermalright.com

parts list

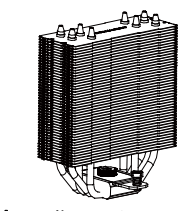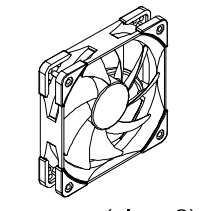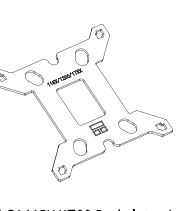
AMD AM4

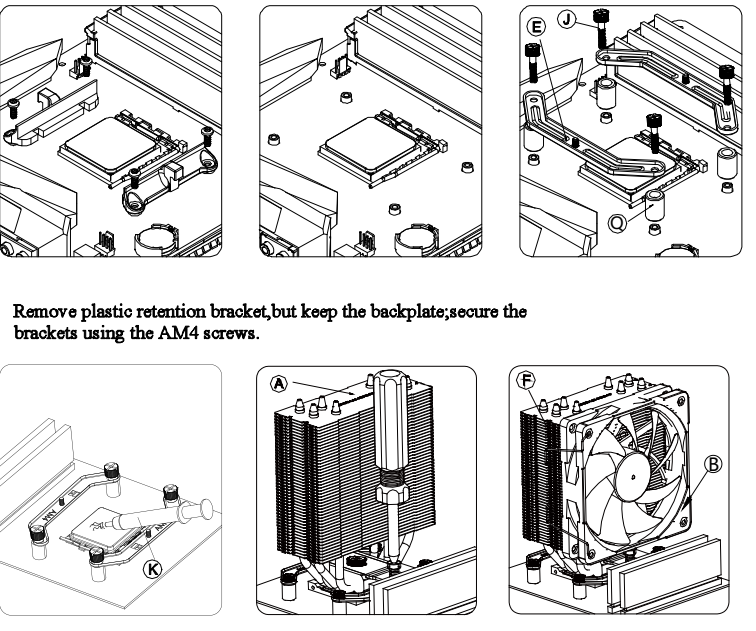

Remove plastic retention bracket, but keep the backplate, secure the brackets using the AM4 screws.

Apply a thin layer of thermal grease, and then secure heatsink.


INTEL LGA115X/1200

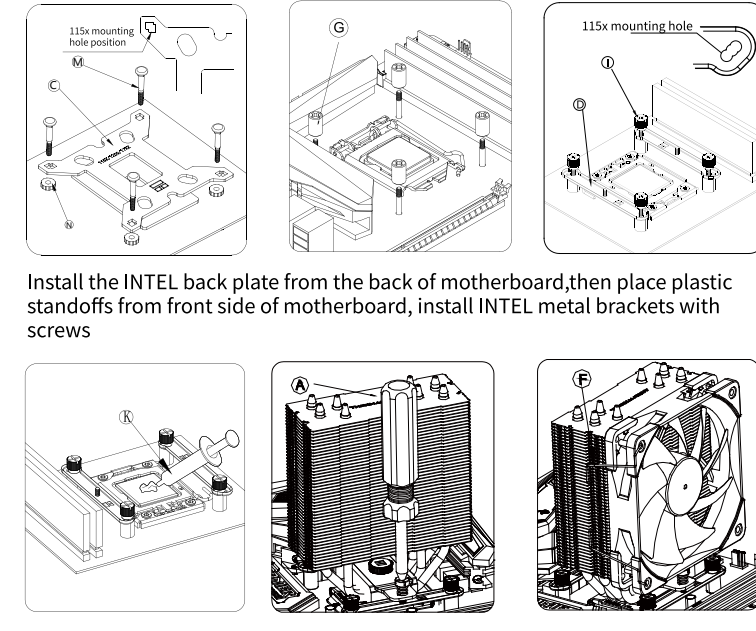

Install the INTEL back plate from the back of motherboard, then place plastic standoffs from front side of motherboard, install INTEL metal brackets with screws

Apply a thin layer of thermal grease, and then secure heatsink.


INTEL LGA20XX

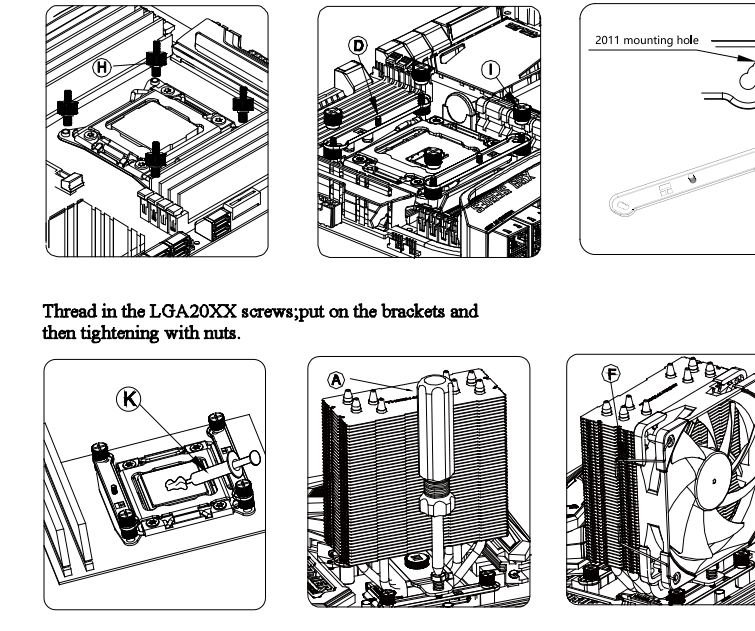

Thread in the LGA20XX screws; put on the brackets and then tightening with nuts.

Apply a thin layer of thermal grease, and then secure heatsink.


INTEL LGA1700

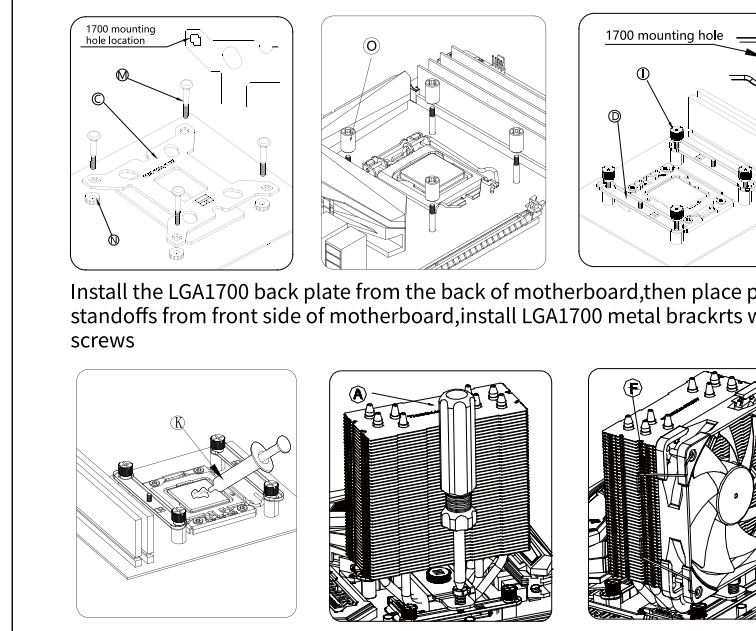

Install the LGA1700 back plate from the back of motherboard, then place plastic standoffs from front side of motherboard, install LGA1700 metal brackets with screws


Apply a thin layer of thermal grease, and then secure heatsink.

Fan wiring

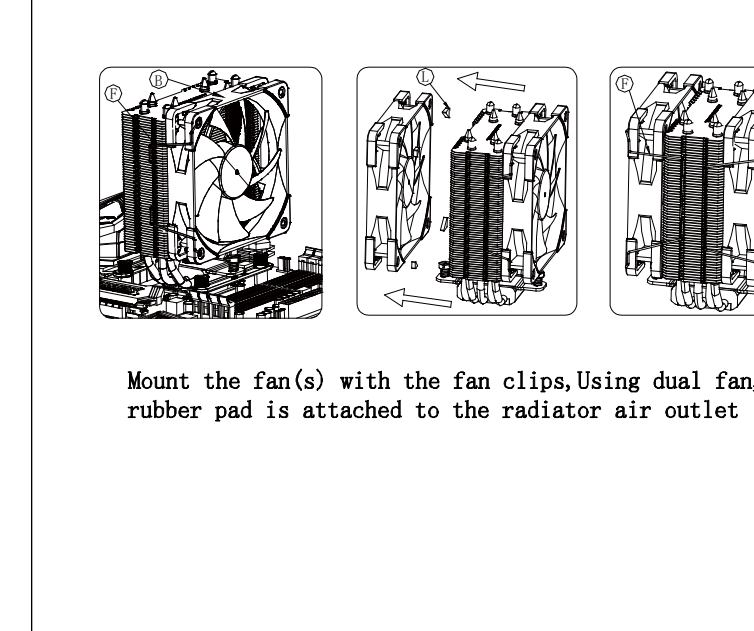

Mount the fan(s) with the fan clips, Using dual fan, the rubber pad is attached to the radiator air outlet

Fan Wiring

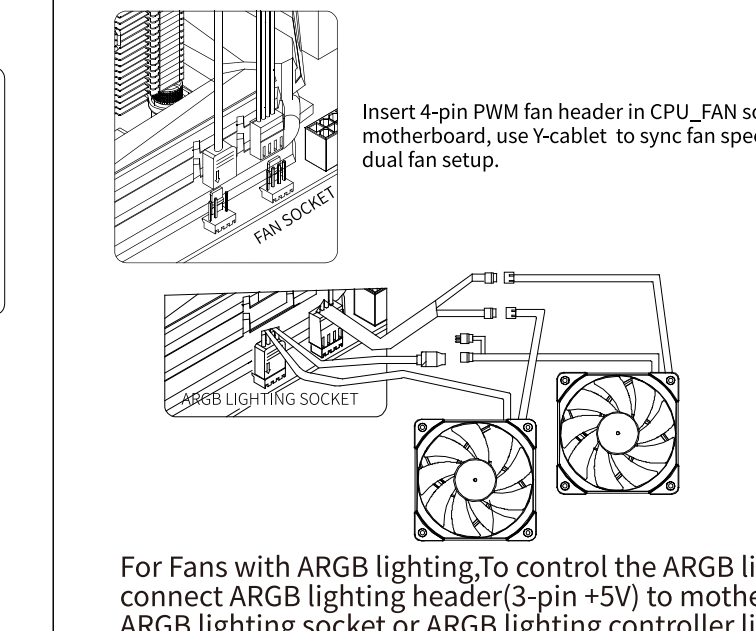

Insert 4-pin PWM fan header in CPU_FAN socket on motherboard, use Y-cable to sync fan speed for dual fan setup.

For Fans with ARGB lighting, To control the ARGB lighting, connect ARGB lighting header (3-pin +5V) to motherboard ARGB lighting socket or ARGB lighting controller, lighting effects can be sync by connecting fan lighting headers with each other