

安装说明

Peerless Assassin 120 MINI 系列

! 安装前请先去除铜底保护膜

www.thermalright.com

配件清单

 A 散热器 x1	 B 风扇 x1	 C LGA115X/1700背板 x1
 D INTEL 支架 x2	 E AM4/AM5 支架 x2	 F 风扇扣 x2
 H LGA2011/2066 螺柱 x4	 I 螺丝 x4	 J AM4/AM5 胶柱 x4
 K AM4/AM5 螺丝 x4	 N 导热膏 x1	

AMD AM4/AM5



移除AMD原装塑胶支架, 保留背板, 放置AM4/AM5胶柱, 使用AM4/AM5螺丝将支架锁紧到主板原配背板。

涂好导热膏, 然后用螺丝刀锁好主体, 再用风扇线扣固定风扇

INTEL LGA115X/1200



将背板推到LGA115X卡位, 对应主板孔位穿过主板, 然后从正面扭紧LGA115X螺柱, 放置Intel支架再用螺丝固定住。

涂好导热膏, 然后用螺丝刀锁好主体, 再用风扇线扣固定风扇

INTEL LGA2011/2066



将LGA2011/2066螺柱拧到主板, 然后放置支架, 再用螺帽固定住INTEL支架。

涂好导热膏, 然后用螺丝刀锁好主体, 再用风扇线扣固定风扇

INTEL LGA1700



将背板推到LGA1700卡位, 对应主板孔位穿过主板, 然后从正面扭紧LGA1700螺柱, 放置Intel支架再用螺丝固定住。


涂好导热膏, 然后用螺丝刀锁好主体, 再用风扇线扣固定风扇

风扇接线



将风扇 4针PWM接头插入主板CPU_FAN插座。

如果风扇有ARGB灯效, 请将ARGB 3针 (5V) 插入主板对应ARGB灯效插座或者控制器。



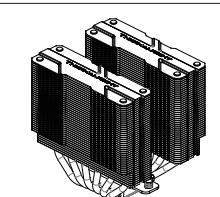
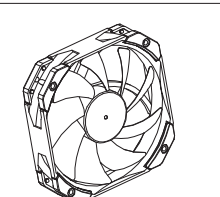
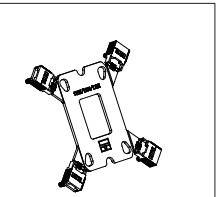
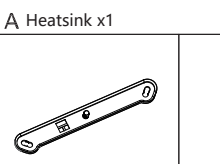
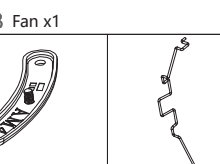
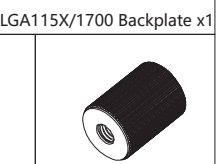
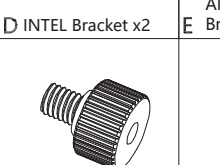
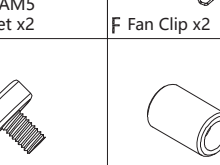
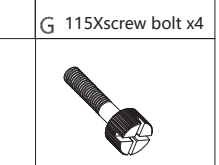

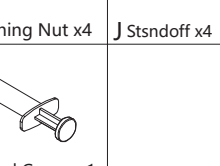
INSTALLATION GUIDE

Peerless Assassin 120 MINI Series


Please remove protective sticker before install

www.thermalright.com

Parts List

 A Heatsink x1	 B Fan x1	 C LGA115X/1700 Backplate x1
 D INTEL Bracket x2	 E AM4/AM5 Bracket x2	 F Fan Clip x2
 H LGA2011/2066 Screw x4	 I Tightening Nut x4	 J Standoff x4
 K AM4/AM5 Screw x4	 N Thermal Grease x1	

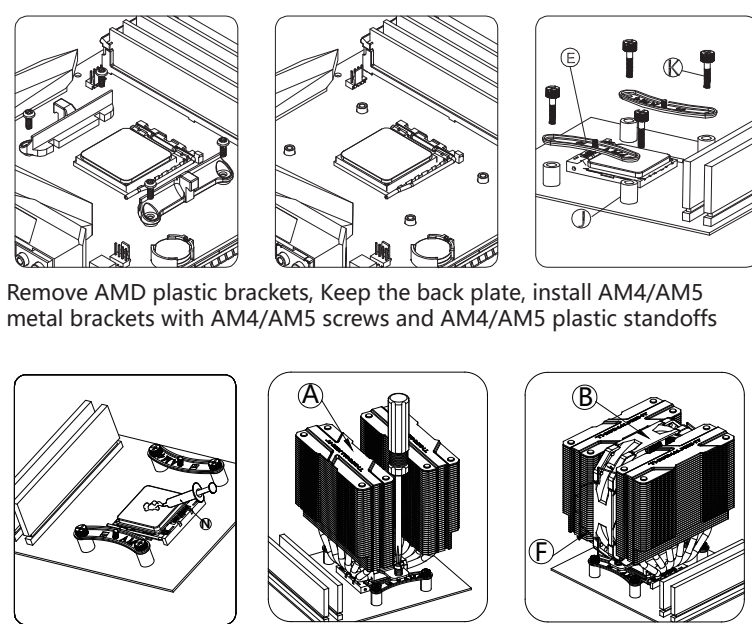
AMD AM4/AM5



Remove AMD plastic brackets, Keep the back plate, install AM4/AM5 metal brackets with AM4/AM5 screws and AM4/AM5 plastic standoffs

Apply thermal paste on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips

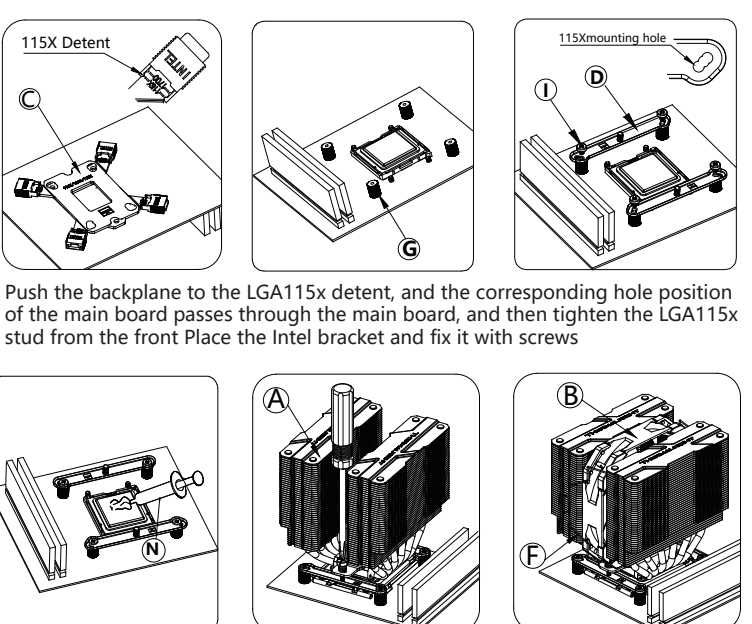
INTEL LGA115X/1200



Push the backplane to the LGA115x detent, and the corresponding hole position of the main board passes through the main board, and then tighten the LGA115x stud from the front Place the Intel bracket and fix it with screws

Apply thermal paste on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips

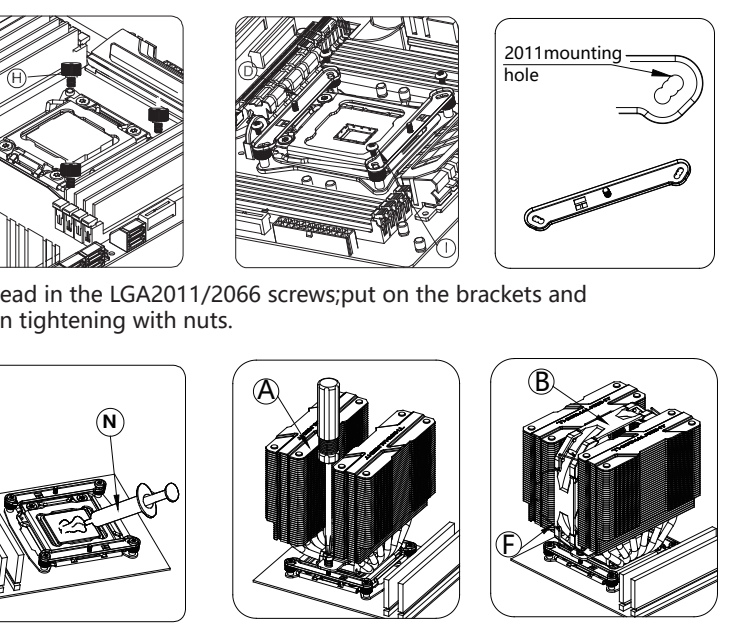
INTEL LGA2011/2066



Thread in the LGA2011/2066 screws;put on the brackets and then tightening with nuts.

Apply thermal paste on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips

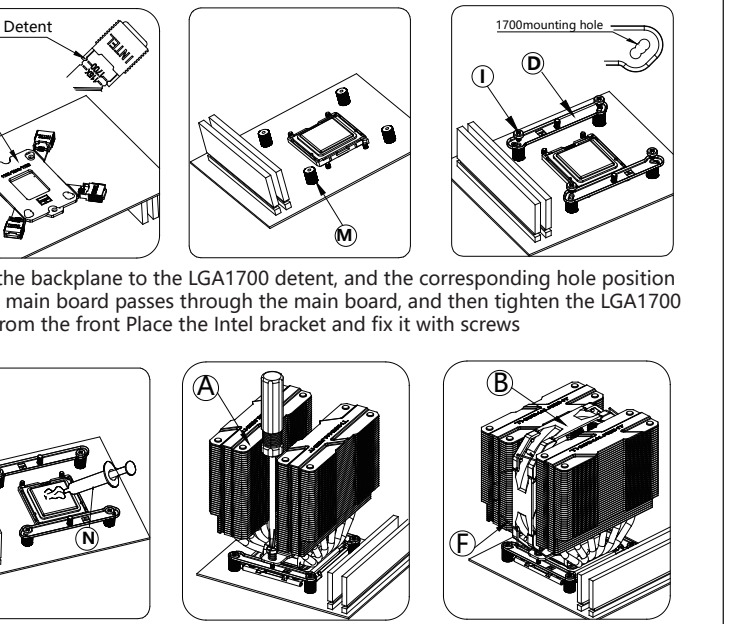
INTEL LGA1700



Push the backplane to the LGA1700 detent, and the corresponding hole position of the main board passes through the main board, and then tighten the LGA1700 stud from the front Place the Intel bracket and fix it with screws

Apply thermal paste on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips

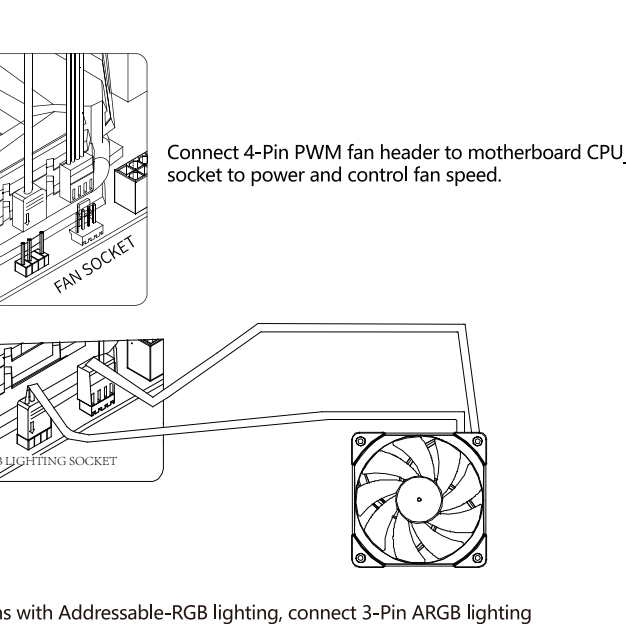Fan Wiring



Connect 4-Pin PWM fan header to motherboard CPU_FAN socket to power and control fan speed.

For Fans with Addressable-RGB lighting, connect 3-Pin ARGB lighting header to motherboard 3-Pin +5V ARGB lighting socket to control lighting effect.